

Part Number	Alt Part Number	Condition	aircraft	Description	QTY	notes
B051-6		SV	Robinson	nine hole instrument panel R-44	1	
C-023-1		AR	Robinson	tailcone R-44	1	
C-014-11		AR	Robinson	Skid Tube R-44	1	
C-14-12		AR	Robinson	skid tube R-44	1	
AE82230H		AR	Robinson	Drain valve Robinson	1	
8000	C-599-1 8000		Robinson	United Instruments	2	
C181-3		AR	Robinson		1	
C069-3		AR	Robinson	Cyclic Control assy	3	
A756-6		AR	Robinson		1	
C907-2		AR	Robinson		2	
C166-2		AR	Robinson	Shaft - Clutch (Ref)	2	
C154-1		AR	Robinson	Hub	1	
C236-2		AR	Robinson		1	
C470-1		AR	Robinson	Tail Skid	1	
C043-1		AR	Robinson	Stabilizer - Lower Vertical	1	
C343-1	C343-2	AR	Robinson	Push-Pull Tube Assembly	1	
C344-1		AR	Robinson	Tube Weldment	2	
A336-3		AR	Robinson	Push-Pull Tube	1	
A327-1		AR	Robinson	Overtravel Spring Assembly	1	
C345-1		AR	Robinson	Strut Weldment	1	
C174-1		AR	Robinson	Support	1	
C592-1		AR	Robinson	Mount	1	
C316-1		AR	Robinson	Bellcrank Assembly	1	
C439-7		AR	Robinson	Push-Pull Tube Guide Assembly	1	
C947-1		AR	Robinson	Flex Plate	1	
C227-4		AR	Robinson	Hinge Assembly RH	1	
C389-4		AR	Robinson	Hinge Assembly RH, upper	1	
C227-4		AR	Robinson	Hinge Assembly (RH, upper)	1	
D226-2		AR	Robinson	Bracket	2	
B051-6		AR	Robinson	Console Assembly	1	

Sold

B206-1		AR	Robinson	Face	1	
C367-12		AR	Robinson	Stiffener	1	
C239-1	C-014-10	AR	Robinson	Strut Assembly	1	
C121-19		AR	Robinson	Push-Pblyull Tube Asse	1	
C261-3		AR	Robinson	Rib-Lower (LH)	1	
C261-7		AR	Robinson	Rib-Middle (LH)	1	
C526-1		AR	Robinson	Retainer	1	
C012-2		AR	Robinson	Collective Stick Assembly	3	
A497-1		AR	Robinson	Washer (Ref)	1	
A738-16		AR	Robinson	Gang Channel	1	
C328-1		AR	Robinson	Connecting Rod Assembly	1	
C261-8		AR	Robinson	Rib-Middle (RH)	1	
C261-4		AR	Robinson	Rib-Lower (RH)	1	
C463-2		AR	Robinson	Cover	1	
C337-1		AR	Robinson	Jackshaft Assembly	1	
C711-4		AR	Robinson	Strip	1	
C121-3		AR	Robinson	Push-Pull Tube Assembly	1	
A019-3		AR	Robinson	Valve Assembly	1	
C680-1		AR	Robinson	Cover Assembly (Ref)	1	
C493-1		AR	Robinson	Sheave-Lower	1	
C187-3		AR	Robinson	Cover	1	
A712-3		AR	Robinson	Cover	1	
A755-3		AR	Robinson	Pedal Assembly - Co-Pilot, Left Foot	1	
C529-1		AR	Robinson	Mount Assembly	1	
A755-4		AR	Robinson	Pedal Assembly - Co-Pilot, Right Foot	1	
C427-5		AR	Robinson	Support Assembly	2	
C426-1		AR	Robinson	Cap	1	
C038-6		AR	Robinson	Collective Spring Assembly	2	
C261-8		AR	Robinson	Rib - Middle (RH)	1	
C261-7		AR	Robinson	Rib - Middle (LH)	1	
A120-3		AR	Robinson	Bellcrank Assembly	1	
C041-1		AR	Robinson	Damper Assembly	1	
C041-3		AR	Robinson	Link	1	
B345-2		AR	Robinson	Link	2	
C908-1		AR	Robinson	Yoke Assembly	1	
C343-3		AR	Robinson	Push-Pull Tube Assembly	1	

C593-1		AR	Robinson	Engine Mount	2	
D202-1		AR	Robinson	D202-1	1	
D113-1		AR	Robinson	Link	1	
D110-1		AR	Robinson		1	
D112-1		AR	Robinson	Lever	1	
D123-1		AR	Robinson	Arm Assembly	1	
D111-1		AR	Robinson	Bracket	1	
C014-11		AR	Robinson	Skid Tube Assembly (LH)	1	
C-242-1	C-242-2	AR	Robinson	Skid tube assy LH and RH	2	
C141-10		AR	Robinson	Washer	1	
C320-2		AR	Robinson		1	
A412-2		AR	Robinson	Cover (RH)	1	
C522-5		AR	Robinson	Control - Cabin Air Vent	1	
C261-6		AR	Robinson	Rib - Upper (RH)	1	
C261-6		AR	Robinson	Rib - Upper (RH)	1	
C345-1		AR	Robinson	Strut Weldment	1	
C-336-1		AR	Robinson	Part	1	
A331-4		AR	Robinson	Bellcrank Assembly	1	
C048-1		AR	Robinson		1	
C258-1		AR	Robinson	Pitch Link Assembly	2	
C058-1		AR	Robinson	Grip Assembly - Co-Pilot	1	
C606-1		AR	Robinson	Cover	1	
C529-1		AR	Robinson	Mount Assembly - Tail Light	0	
C175-2		AR	Robinson	Cyclic Stick Assembly	1	
A205-5		AR	Robinson	Fork Assembly	1	
C958-5		AR	Robinson	Bellcrank	1	
C642-3 N	C007-5 P	AR	Robinson	Part	1	
C319-3		AR	Robinson	Connecting Link	1	
A550-1		SV	Robinson	fuel sender	2	
C550-1		SV	Robinson	fuel sender	2	
C181-3		AR	Robinson	Part	1	
C710-1B	C9607	AR	Robinson	Part	1	
C710-1 C	C10240	AR	Robinson	Part	1	
A454-1 D		AR	Robinson	Part	1	
C427-5 F		AR	Robinson	Part	1	
C172-1		AR	Robinson	Part	1	

A677-4 Q		AR	Robinson	Part	1	
A680-2 A		AR	Robinson	Part	1	
C177-2 H		AR	Robinson	Part	1	
C582-1 F		AR	Robinson	Part	2	
C947-1 F		AR	Robinson	Flex Plate	1	
C395-3 C		AR	Robinson	Part	2	
C395-4 C		AR	Robinson	Part	2	
A332-1		SV	Robinson	lever	1	
C121-9	LOT 16	AR	Robinson	Tube	1	
D224-1	C196-1	AR	Robinson	Drive Shaft	1	
B254-1	A738-1	AR	Robinson	Fuel Strainer, Robinson R44	1	
C-021-1	c-031-1	AR	Robinson	tail rotor gear box	1	
C006-3	C-006-1	AR	Robinson	main rotor gear box	2	
D-278-1		SV	Robinson	controller governor	1	
C-010-3		AR	Robinson	main tank	1	
D-043-3		AR	Robinson	aux tank	1	
C-146-1	C-264-1		Robinson	main rotor gear box	1	
C-014-9	C-241-1	AR	Robinson	strut assy aft	1	
C-051-1		AR	Robinson	clutch	1	
C026-1	C026-2	AR	Robinson	door forward lh and rh	3	
C026-3	C026-4	AR	Robinson	door assy aft lh and rh	3	
C928-1	C-930-1	AR	Robinson	seat assy forward lh and rh	1	
C932-1		AR	Robinson	backrest forward lh and rh	2	
C932-2		AR	Robinson	back rest forward lh and rh	2	
A-569-7		SV	Robinson	low RPM warning	1	
B144-3		AR	Robinson	cluster gauges	1	
C792-1	000-20143	SV	Robinson	dual tach	1	
c042-1		SV	Robinson	stabilizer assy upper	1	
B050	B051	SV	Robinson	console	3	
A667-7	A667-8	AR	Robinson	shoe - skid	4	
C082-1		AR	Robinson	strut fairing	4	
A569-10		AR	Robinson	warning LOW RPM	1	
D-278-2		AR	Robinson	Controller Assy	1	
SS1002		SV	Robinson	starter booster	2	
JS555		SV	Robinson	switch	2	
D-212-1		AR	Robinson	servo	6	

A-689-6	R7295	SV	Robinson	fuel cap	1	
B-247-5	5A2337-3	SV	Robinson	governor assy	2	
C758-2		SV	Robinson	stick assy lh	1	
C051-2	C051-1	AR	Robinson	clutch assy	2	
C020-1			Robinson	frame	1	